


Capacitors: 15 V or higher  
 C1,C3 - .1 uF ceramic disc  
 C2 - 50 uF electrolytic C4 - .05 uF ceramic disc  
 PL1,PL2 - Phono plug  
 Q1 - 2N3391 transistor (GE) min = 250  
 Q2 - 2N3392 transistor (GE) min = 150  
 Resistors: 1/2 watt, 10 % unless otherwise  
 indicated  
 R1 - 22,000 ohms  
 R2 - 50,000 ohm, audio-taper potentiometer  
 R3,R7,R8 - 10,000 ohms R4,R6 - 150,000 ohms  
 R5 - 6,800 ohms R9 - 1 megohm

R10 - 50,000 ohm, audio-taper potentiometer  
 with SPST switch  
 S1 - SPST switch (on R10)  
 S2 - SPDT push-push switch (Carling 112P or  
 equiv.)  
 B1 - 9 volt battery  
 Substitute:  
 2N5088 for 2N3391  
 2N3904 for 2N3392

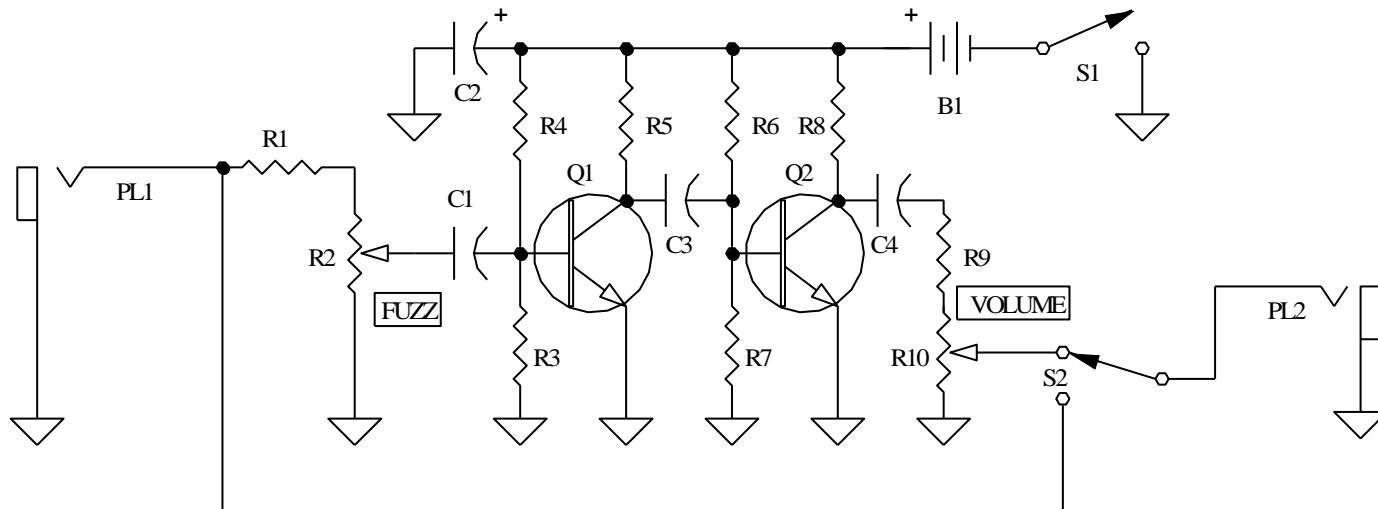

1968 ELECTRONICS ILLUSTRATED  
 HERB FRIEDMAN  
 FUZZ BOX FOR SWINGERS